STANDARD DEPARTURE CHART INSTRUMENT (SID) - ICAO

TRANSITION ALTITUDE 10 000 FT
VAR 5° E (2020)

APP 120.350
TWR 132.925
ATIS 133.825

TUZLA (LQTZ) RWY 09

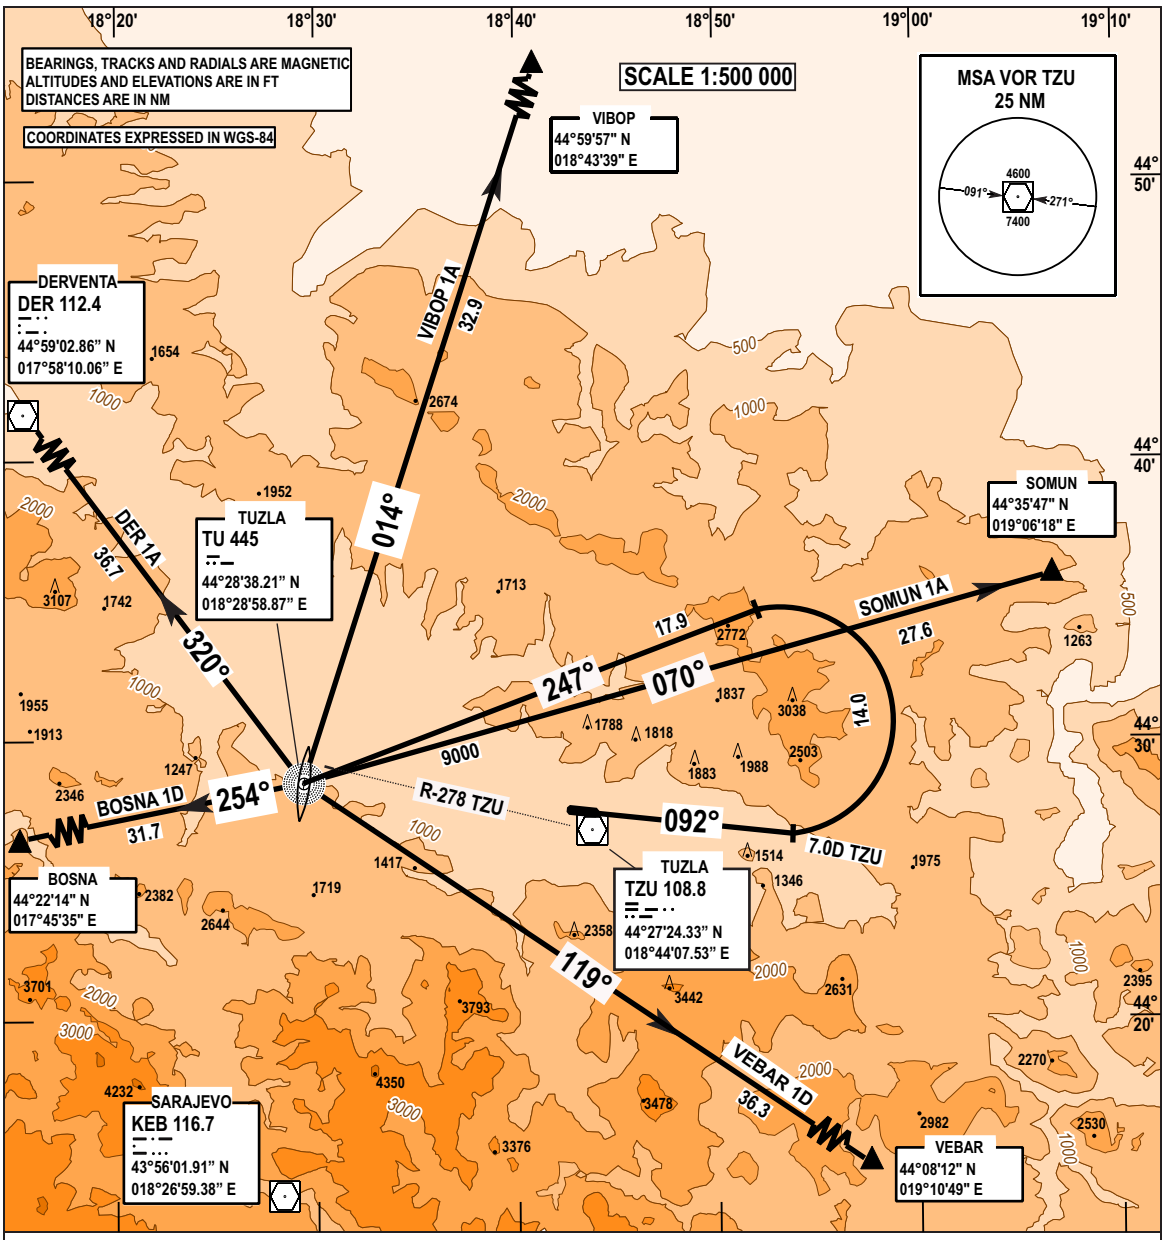

BOSNA 1D DEPARTURE - RWY09

Climb straight ahead. At 7.0D TZU turn left, intercept and follow TU QDM 247° to TU NDB, next BOSNA POINT.
Cross 7.0D TZU at or above 3100 ft and R-278 TZU at or above 9000 ft.
This procedure requires PDG of 5.4% until 3300 ft.

DER 1A DEPARTURE - RWY09

Climb straight ahead. At 7.0D TZU turn left, intercept and follow TU QDM 247° to TU NDB, next DER VOR/DME.
Cross 7.0D TZU at or above 3100 ft and R-278 TZU at or above 9000 ft.
This procedure requires PDG of 5.4% until 3300 ft.

VIBOP 1A DEPARTURE - RWY09

Climb straight ahead. At 7.0D TZU turn left, intercept and follow TU QDM 247° to TU NDB, next VIBOP POINT.
Cross 7.0D TZU at or above 3100 ft and R-278 TZU at or above 9000 ft.
This procedure requires PDG of 5.4% until 3300 ft.

SOMUN 1A DEPARTURE - RWY09

Climb straight ahead. At 7.0D TZU turn left, intercept and follow TU QDM 247° to TU NDB, next SOMUN POINT.
Cross 7.0D TZU at or above 3100 ft and R-278 TZU at or above 9000 ft.
This procedure requires PDG of 5.4% until 3300 ft.

VEBAR 1D DEPARTURE - RWY09

Climb straight ahead. At 7.0D TZU turn left, intercept and follow TU QDM 247° to TU NDB, next VEBAR POINT.
Cross 7.0D TZU at or above 3100 ft and R-278 TZU at or above 9000 ft.
This procedure requires PDG of 5.4% until 3300 ft.

CHG: ATIS added

THIS PAGE INTENTIONALLY LEFT BLANK